



Frame Hinge and Strike Locations
 1 3/8" with 2 Each 3 1/2" Hinges

NOTE: When using this chart for premachining door measurements, reduce the A & C dimensions 3/32" each for door clearance.

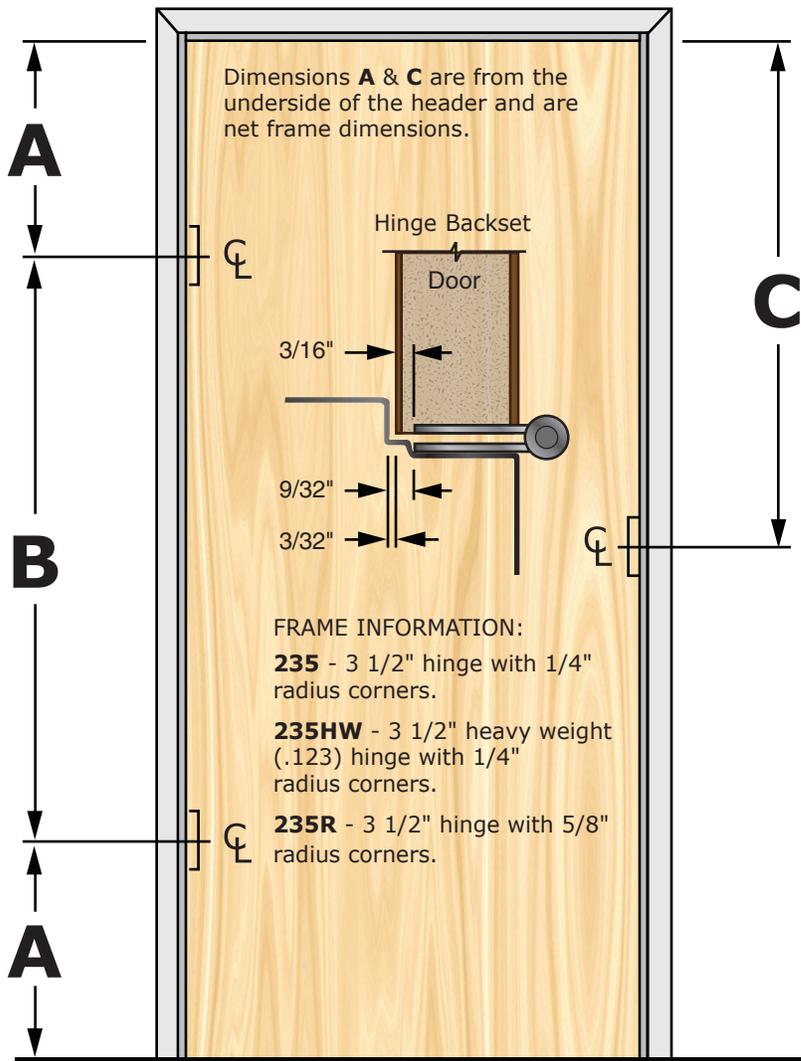


NET FRAME DIMENSIONS			
HEIGHT	A	B	C
3-0	10-3/32	16	18-3/32*
3-2	10-3/32	18	19-3/32*
3-6	10-3/32	22	21-3/32*
4-0	10-3/32	28	24-3/32*
4-2	10-3/32	30	25-3/32*
4-4	10-3/32	32	26-3/32*
4-6	10-3/32	34	27-3/32*
4-8	10-3/32	36	28-3/32*
4-10	10-3/32	38	29-3/32*
5-0	10-3/32	40	20-3/32
5-2	10-3/32	42	22-3/32
5-6	10-3/32	46	26-3/32
6-0	10-3/32	52	32-3/32
6-2	10-3/32	54	34-3/32
6-4	10-3/32	56	36-3/32
6-8	10-3/32	60	40-3/32*
6-9	10-3/32	61	41-3/32
6-9	10-3/32	61	40-19/32*
7-0	10-3/32	64	44-3/32
7-0	10-3/32	64	42-3/32*

+ Frame Heights are 3/16" longer than callout door height unless ordered net. (3/32" top, 3/32" bottom for clearance).

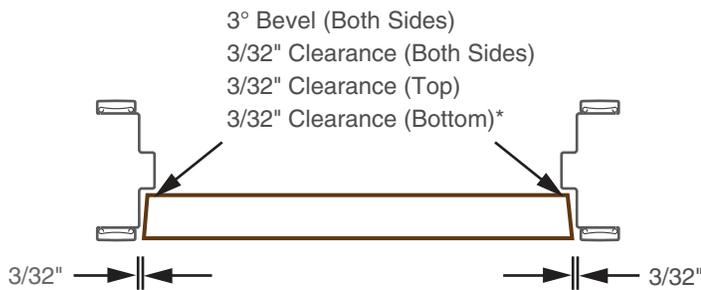

*Additional clearance is required for Thresholds and various floor conditions.

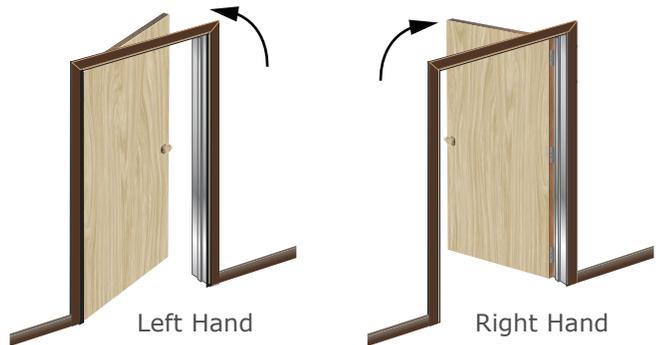

Handing Information: To establish handing always **Push** the door away from you.

*Reversible - Frame can be used as Left or Right Hand, swing in or out

FOR SPECIFICATIONS NOT SHOWN, PLEASE CONSULT OFFICE.
 PLEASE SPECIFY IF USING COMMERCIAL OR RESIDENTIAL WEIGHT HINGES.