



Frame Hinge and Strike Locations
 1 3/8" Dutch with 4 Each 3 1/2" Hinges

NOTE: When using this chart for premachining door measurements, reduce the A & E dimensions 3/32" each for door clearance.

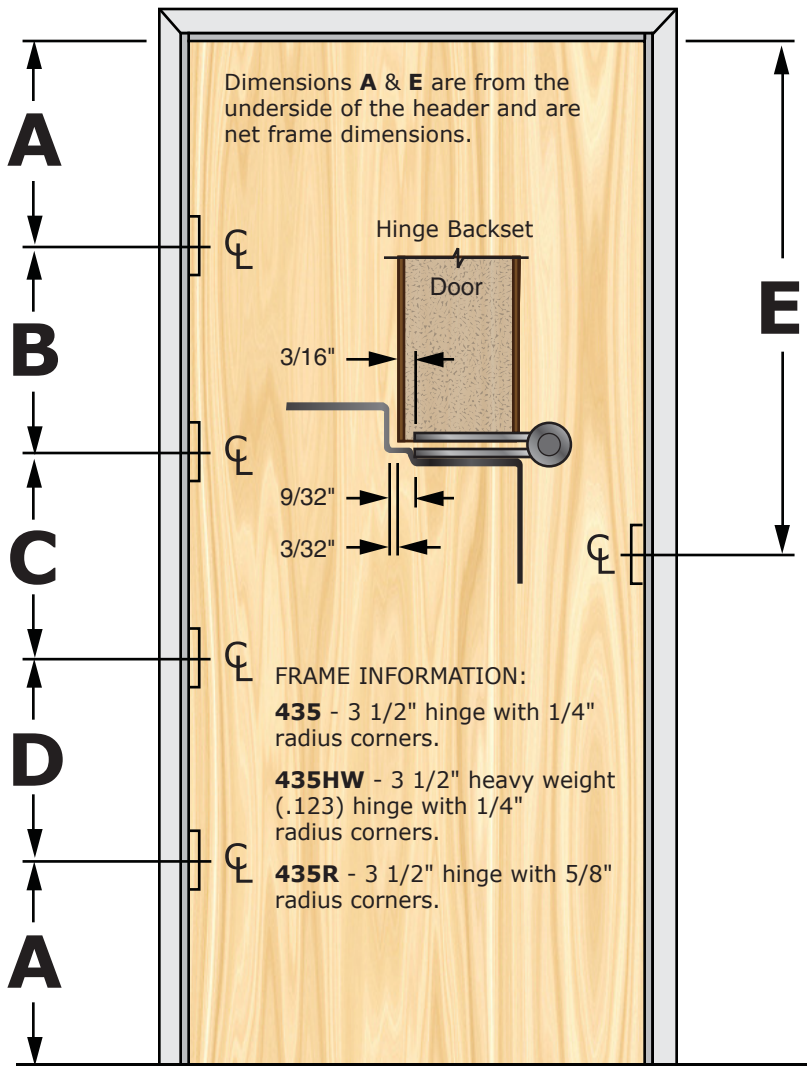


NET FRAME DIMENSIONS					
HEIGHT	A	B	C	D	E
6-0	4-27/32	22	10-1/2	30	36-3/32
6-8	4-27/32	30	10-1/2	30	44-3/32
6-9	4-27/32	31	10-1/2	30	45-3/32
6-10	4-27/32	32	10-1/2	30	46-3/32
7-0	4-27/32	34	10-1/2	30	48-3/32
7-2	4-27/32	36	10-1/2	30	50-3/32
7-4	4-27/32	38	10-1/2	30	52-3/32
7-6	4-27/32	40	10-1/2	30	54-3/32
7-8	4-27/32	42	10-1/2	30	56-3/32
7-10	4-27/32	44	10-1/2	30	58-3/32
8-0	4-27/32	46	10-1/2	30	60-3/32
8-2	4-27/32	48	10-1/2	30	62-3/32
8-4	4-27/32	50	10-1/2	30	64-3/32
8-6	4-27/32	52	10-1/2	30	66-3/32
8-8	4-27/32	54	10-1/2	30	68-3/32
8-10	4-27/32	56	10-1/2	30	70-3/32
9-0	4-27/32	58	10-1/2	30	72-3/32
9-4	4-27/32	62	10-1/2	30	76-3/32
9-8	4-27/32	66	10-1/2	30	80-3/32
10-0	4-27/32	70	10-1/2	30	84-3/32

+ Frame Heights are 3/16" longer than callout door height unless ordered net. (3/32" top, 3/32" bottom for clearance).

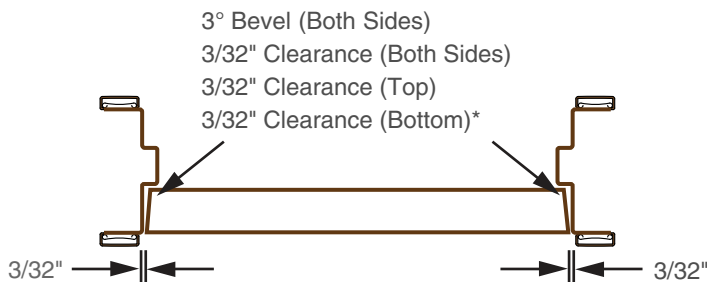

*Additional clearance is required for Thresholds and various floor conditions.

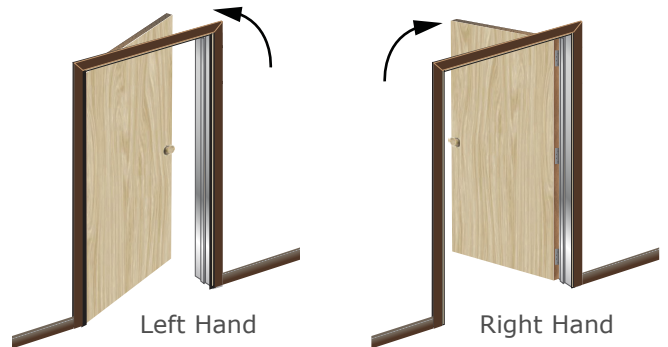

Handing Information: To establish handing always **Push** the door away from you.

FOR SPECIFICATIONS NOT SHOWN, PLEASE CONSULT OFFICE.
 PLEASE SPECIFY IF USING COMMERCIAL OR RESIDENTIAL WEIGHT HINGES.